



# UNLOCK WARNING SWITCH

## INSPECTION

- 1. **INSPECT UNLOCK WARNING SWITCH ASSEMBLY**
  - (a) Measure the resistance of the switch.

**Standard resistance**

Tester Connection	Switch Condition	Specified Condition
1 - 2	Not pushed	10 kΩ higher
1 - 2	Pushed	Below 1 Ω

If the result is not as specified, replace the unlock warning switch assembly.